

Operating Instructions

- 1. Remove screw, open box
- 2. Take out nylon washer, handle, and nut
- 3. Slide square washer and handle onto threaded post
- 4. Install nut by hand, make snug, do not overtighten
- 5. Firmly grip handle with left hand, and release secondary safety latch. You may need to rock handle slightly to release latch. DO NOT LET GO OF HANDLE.
- 6. Rotate handle until light head is at desired elevation.
- 7. Lock secondary safety latch. It is now safe to release the handle.
- 8. Perform desired repair to light.
- 9. Rotate handle until light reaches top of rail. The drive mechanism should be "clicking". You will feel when it reaches the top. DO NOT OVER TIGHTEN.
- 10. If your repair was successful, double-check the secondary safety lock, it should be in the down position and holding the light. After this is verified remove the nut, handle and nylon washer. Place them carefully in box, and close.

Should you have any questions or problems operating this unit, please contact **retropole** support by one of the following methods:

EMAIL support@retropole.com

SUPPORT PORTAL http://www.retropole.com/login.shtml

PHONE 972-987-1642

Dallas 972-987-1642

NY 212-699-0759 LA 213-908-0823 Chicago 312-665-0080 FAX 972-987-1659 www.retropole.com sales@retropole.com